

FW Update SOP

1. Download the FW zip file: ESD-P1NL_FW Upg_250717854F06.zip




2. After extracting, the executable file will appear: ASMT_246xFWUpg_250717854F06



3. Confirm that the ProArt PA40SU is connected to the computer, then double-click the executable file to start the update

(Do not remove or disconnect the ESD-P1NL device or cable during this process, as doing so may cause the update to fail)

4. Once the update is complete, the following screen will appear, confirming a successful update. Then disconnect the ProArt PA40SU and reconnect it to the computer to finish

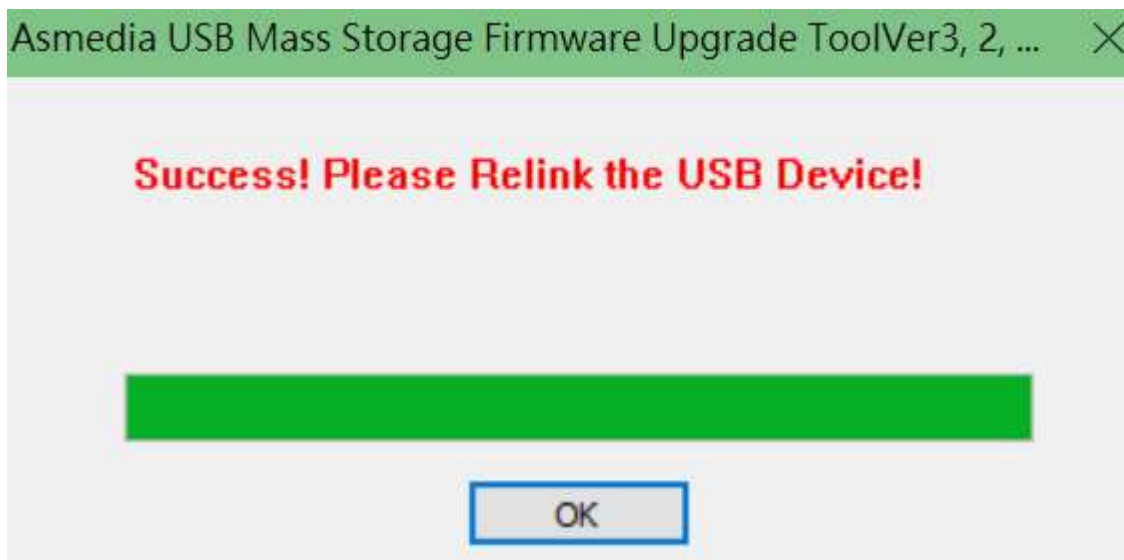

5. After the update is complete, users can extract ASUS ProArt SSD Check FW Version_20260820.zip, run CHKFW.bat to verify. A "PASS" result indicates the firmware has been updated correctly.

